

LMK CONTROL ELEMENTS



Use the [INFO] button to make sure that the display looks like this picture.

ADDITIONAL HINTS

HINT
A

Charging and storing the battery

The battery needs about **2 hours** at **23°C** to fully charge. If the camera is not in use for a longer period of time, it is recommended to remove the battery to extend its lifetime.



HINT
B

Overexposure warning

Press [MENU]. Select the top menu [▶] and select the fourth tab with [☀]. Press [▼▲] to move to the 'Highlight alert' submenu. Press [Q/SET] and select 'Enable' with [▼▲]. Press [Q/SET] to confirm.



HINT
C

Capture with self-timer





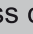


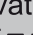







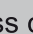
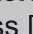





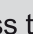
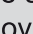



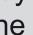




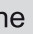






Press [Q/SET] to display the shooting options. Press [☰] to select 'Metering mode' and select the [☀10] icon. Press [Q/SET] to complete the operation. This allows 3 images of an AEB exposure series to be captured automatically by briefly pressing the shutter release button once.



LEGEND:

☀ Main dial ☀10 Self-timer mode Q/SET Quick control ☰ Drive mode selection

QUICKSTART GUIDE

<p>STEP 01</p>	<p>Switch-on the camera Switch the main switch to ON.</p>	
<p>STEP 02</p>	<p>Switch to manual mode Set the mode dial to M.</p>	
<p>STEP 03</p>	<p>Activate autofocus Set the AF-mode switch on the lens socket to AF.</p>	
<p>STEP 04</p>	<p>Deactivating image stabilizer Set the OS switch on the lens base to OFF.</p>	
<p>STEP 05</p>	<p>Activate RAW image capture mode Press on the [MENU] button. Select the first tab by using []. Use [] to go to the sub-menu 'Quality'. Press [] and use [] to select the 'RAW' option. Press [] to confirm.</p>	
<p>STEP 06</p>	<p>Activate low speed continuous shooting Activate the display with the shutter button. Press [] and use the [] to select the 'Drive Mode' and the [] to select the [] icon. Press [] to confirm.</p>	
<p>STEP 07</p>	<p>Switch-on evaluative metering Press on [] to see the capture options. Use [] to select 'Metering mode' and select the symbol [] by using the []. Press [] to confirm.</p>	
<p>STEP 08</p>	<p>Mount camera to tripod Follow the instructions in the manual for the tripod.</p>	
<p>STEP 09</p>	<p>Set automatic exposure bracketing AEB Press the [MENU] button. Select the third tab by using [] and go to the sub-menu 'Expo.comp./AEB'. Press [] and use [] to move the red bars to the outer edges. Press [] to confirm.</p> <p>ATTENTION: After powering off the camera, this setting must be repeated. This is also due to the automatic standby mode.</p>	
<p>STEP 10</p>	<p>Set exposure time Use [INFO] to set the display according to the figure on the back. Lightly tap the shutter button to activate the exposure metering. Tap on the exposure time and correct it with [] until the exposure compensation display is at zero.</p> <p>ATTENTION: Only exposure times from 1/1000 to 30 s are calibrated for the luminance measurement.</p>	
<p>STEP 11</p>	<p>Set ISO value Use [INFO] to set the display according to the figure on the back. Select [ISO] by taping the display and then use [] to set the ISO value. Press [] to confirm.</p> <p>ATTENTION: Only the ISO values 100, 200, 400, 800 and 1600 are calibrated for luminance measurement. The AUTO mode should not be used.</p>	
<p>STEP 12</p>	<p>Set aperture value Use [INFO] to set the display according to the figure on the back. Lightly tap the shutter button to activate the exposure metering. Tap on the aperture value and correct it with [] until the exposure compensation display is at zero.</p> <p>ATTENTION: Only aperture values from F4 to F11 are calibrated for the luminance measurement.</p>	
<p>STEP 13</p>	<p>Image capture Press the shutter button all the way down and hold it to capture 3 images.</p>	
<p>LEGEND:</p>	<p> Main dial  Cross keys  Quick control dial  Quick controls</p>	

Red labeled section headers are showing steps that has to be repeated every time according to environmental conditions. All other steps must be done once a time. For further system operation please read also the manual of the manufacturer and note the security advices.